PREMIER®

MANUAL DE INSTRUCCIONES
BATIDORA C/TAZA
ED-5127

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

DESCRIPCIÓN 2
INSTRUCCIONES DE SEGURIDAD 3
INSTRUCCIONES DE OPERACIÓN 3
ELABORACIÓN DE PASTA 3
MEZCLA DE HUEVOS Y MANTEQUILLA 3
MEZCLA DE PLATOS FRÍOS, ENSALADAS Y LÍQUIDOS 4
LIMPIEZA Y MANTENIMIENTO 4
CONTENIDO 4
DIAGRAMA DE CIRCUITOS 5

PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

DESCRIPCIÓN

1. Cuerpo superior
2. Protector del tazón
3. Tazón
4. Cuerpo inferior
5. Cubierta inferior
6. Patas
7. Interruptor
8. Botón arriba y abajo
9. Batidor de huevos
10. Batidor plano
11. Gancho amasador
12. Separador de claras de huevo
13. Cubierta a prueba de polvo

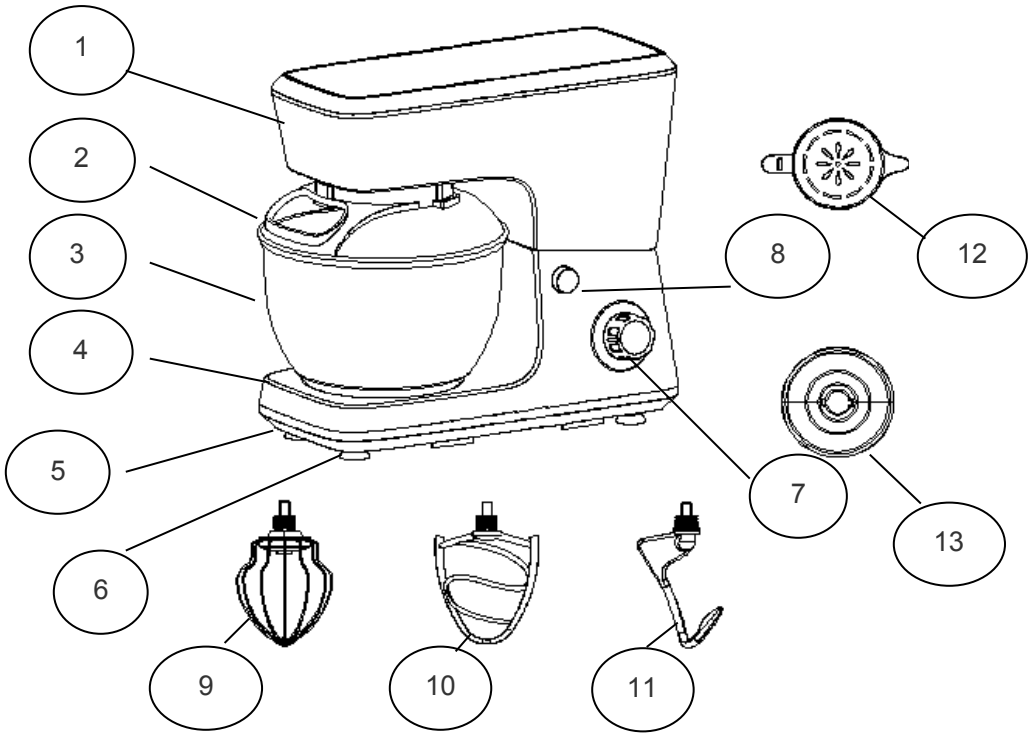

ANTES DE USAR POR VEZ PRIMERA
Todas las partes deben ser limpiadas completamente antes de utilizar la batidora por vez primera.

⚠ INSTRUCCIONES DE SEGURIDAD

- No coloque la unidad cerca de fuentes de agua ni la sumerja en agua u otros líquidos.
- No permita que el cable de poder cuelgue del mostrador y evite ponerlo en una posición donde se puedan enredar las personas.
- Asegúrese de que el voltaje de la unidad corresponde con el del área donde la va a conectar.
- La unidad está diseñada para uso en interiores. No la use en exteriores.
- Manténgala alejada del fuego, cortinas, horno electromagnético, tostador, etc.
- Coloque la unidad sobre una superficie plana y estable.
- Mantenga la unidad lejos del alcance de los niños.
- No toque las partes móviles cuando esté operando la batidora.
- Desconecte el cable de poder antes de limpiar la unidad.
- Si el cable de poder está dañado, haga que se repare antes de conectarlo de nuevo.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

INSTRUCCIONES DE OPERACIÓN

1. Mezcle los alimentos que va a batir.
2. Gire el botón arriba/abajo para abrir el cuerpo superior.
3. Coloque el tazón con la comida en la base y presione la flecha superior para asegurarse de que el tazón encaje girándolo.
4. Conecte el batidor y asegúrelo.
5. Gire el botón arriba/abajo para bajar el cuerpo superior.
6. Active la función de batido.
7. Retire el tazón de la base.
8. Al terminar desconecte el cable de poder.

ELABORACIÓN DE PASTA

1. La proporción entre harina y agua es 5:3 (la proporción es sólo una referencia; puede ajustarse dependiendo de sus necesidades personales).
2. Utilice la velocidad baja por 1 minuto y luego la velocidad media de 3 a 4 minutos.
3. Asegúrese de no exceder la capacidad máxima del tazón.
4. La capacidad máxima del tazón es de 1.000g de harina y 550g; el tiempo máximo de mezcla es de 3 minutos; se sugiere mezclar a velocidad media.
5. Utilice el gancho de amasado.

MEZCLA DE HUEVOS Y MANTEQUILLA

Agregue los huevos en el tazón. Se recomienda utilizar la velocidad máxima de 2 a 5 minutos hasta que los huevos se pongan pastosos.

1. La cantidad máxima es de 18 huevos.
2. Mientras mezcla, agregue la mantequilla a velocidad media y mezcle de 3 a 5 minutos.
3. Al mezclar leche fresca, mantequilla u otros líquidos, recuerde no exceder la capacidad máxima del tazón.
4. Utilice los batidores de huevos.

MEZCLA DE PLATOS FRÍOS, ENSALADAS Y LÍQUIDOS

1. Mezcle por 5 minutos entre las velocidades baja y alta.
2. No exceda la capacidad del tazón; cuanta más comida haya, la velocidad de la mezcla debe ser menor para evitar que la comida se derrame.
3. Utilice el batidor plano.

LIMPIEZA Y MANTENIMIENTO

- Antes de limpiar la batidora, asegúrese de que está apagada y desconecte el cable de poder. También permita que la batidora se enfríe antes de limpiarla.
- Utilice una prenda sueva húmeda o seca con un poco de jabón para limpiar la parte exterior. No permita que el agua entre a la unidad.
- No utilice materiales abrasivos o alcohol para limpiar la parte interior.
- No sumerja la unidad en agua.
- Para lavar los batidores utilice agua tibia y jabón.
- Para limpiar el tazón utilice igualmente agua y jabón; no utilice químicos abrasivos.

CONTENIDO

- 1 tazón
- 1 batidor plano
- 1 gancho amasador
- 1 batidor para huevos
- 1 separador de claras de huevo
- 1 manual de instrucciones

DIAGRAMA DE CIRCUITOS

Voltaje para 450 Watts de potencia: AC120V/60Hz
Voltaje para 600 Watts de potencia: AC220V/50Hz
Capacidad: 3.5L

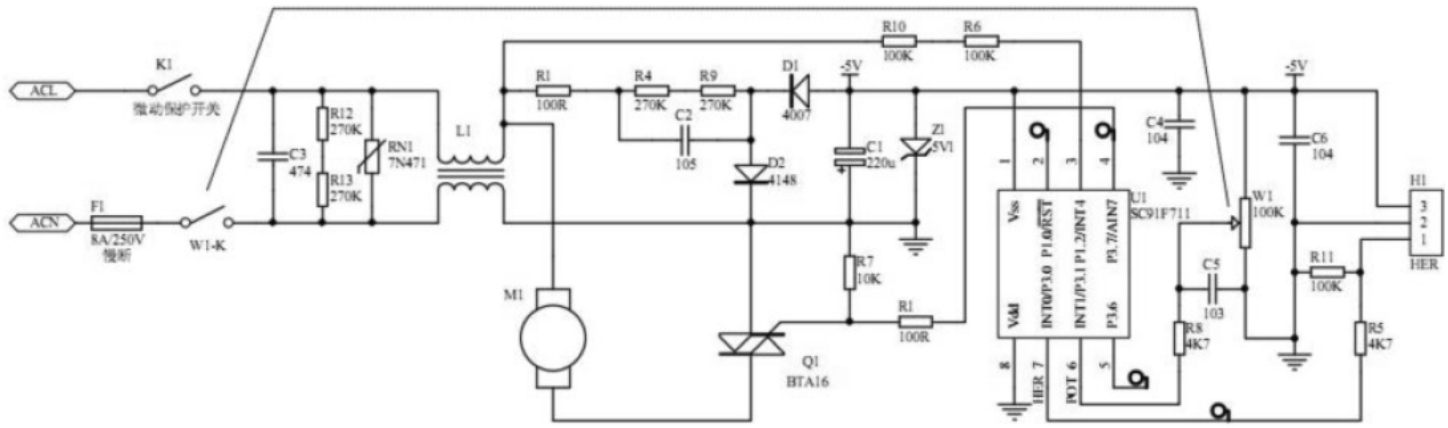

AC220V/50Hz

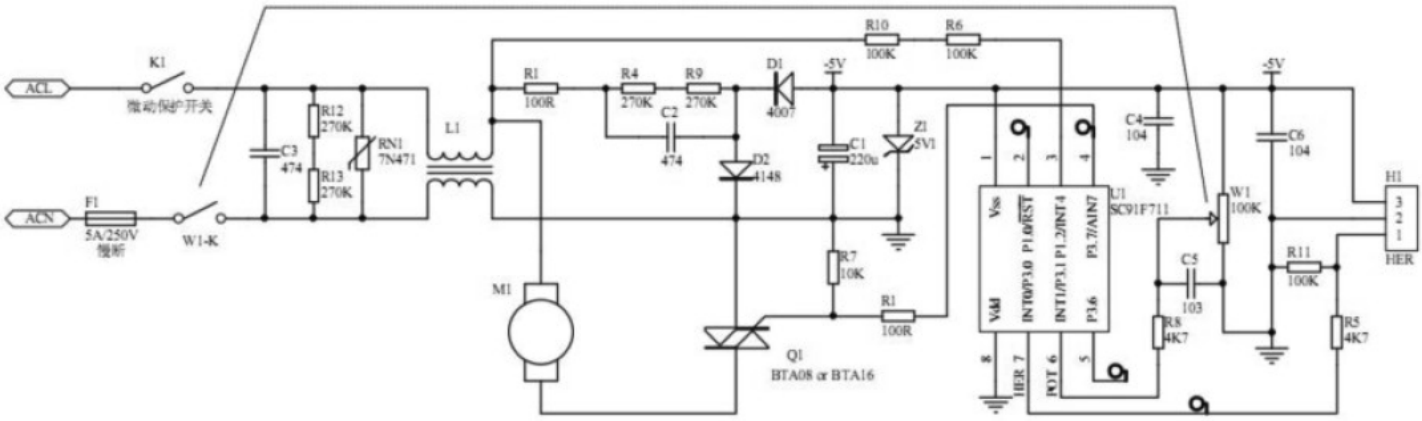

- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.

PREMIER®

INSTRUCTION MANUAL
HAND MIXER W/BOWL
ED-5127

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

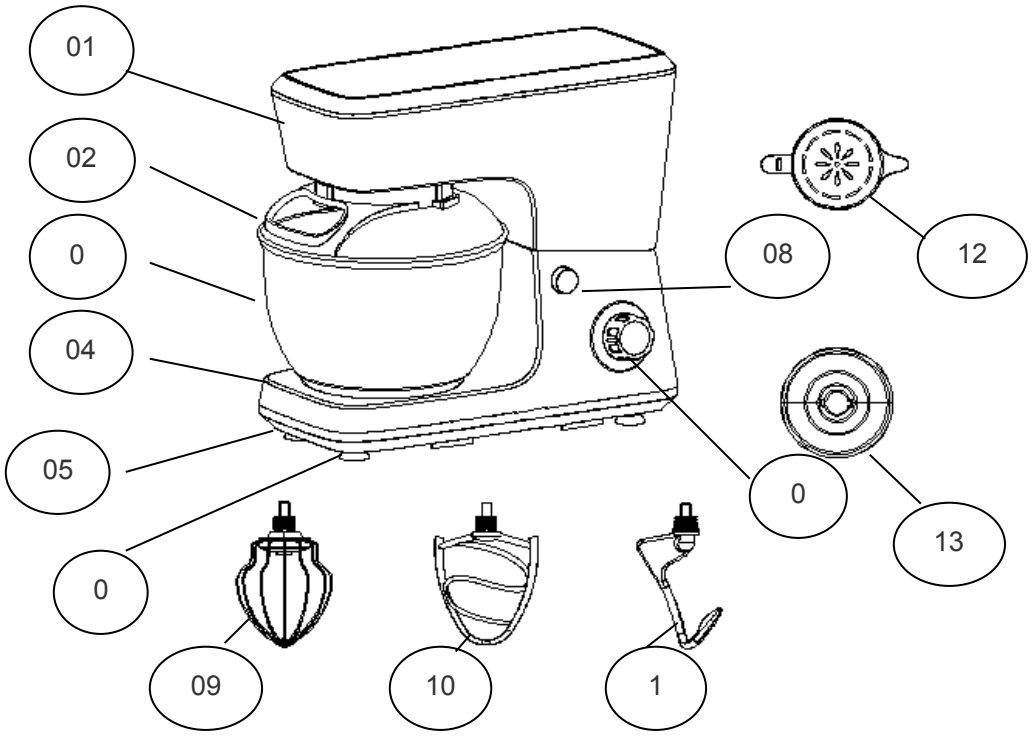

STRUCTURAL DRAWING

(1) upper body
(2) bowl guard
(3) bowl
(4) lower body
(5) bottom cover
(6) foot
(7) switch
(8) up & down button
(9) egg whisk
(10) flat beater
(11) dough hook
(12) egg white separator
(13) dust-proof cover

IMPORTANT SAFEGUARDS

- To avoid the electric shock, please don't put it near the water source and put the host machine into water or other liquid.
- Please read the related to instructional information and satety operation manual.
- Please don't tie the power cable together; to avoid stumbling by the cables, please don't hang it on the edge of desk and cabinet
- Keep the voltage within the standard specification, it shows at the bottom of the host machine. The product only can word with AC electricity. Before power-on, please turn the speed regulation button □for "OFF", it will be closed.
- Don't use it outdoor, it only fits for using indoors.
- Please don't put it near fire, tinder, (curtain, fabrics and so on)electromagnetic oven, toaster r thermo plasma
- Please put it on the smooth surface when use it.
- Please put it near power, it will cut the electricity conveniently.
- It will work under voltage rating, if not sure the electricity-supply situation, please consult electrical supply company.
- Please don't try to maintain it by yourself, if you open or move the lid, it will have electric shock danger.
- Please maintain it in the formal shop.

- Keep it away from children, put it in the place out of children‘s reach.
- Especially, keep children away from it when use it. Careful supervision is required when the device is used by or in the vicinity of children.
- Please use only within the functions limited.
- Please don’t go on using it without anybody’s supervision.
- Please don’t touch the turning parts when use it.
- In it, it must include the product operation manual when it is sold to customer.
- The supply will not afford the loss and responsibility the customer unduly use it
- Please pull up the plug, if stop using or cleaning it.
- If the power cable is damaged, please go to the manufacturer to maintain.
- Switch off the appliance before changing accessories or approaching parts which move in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

BEFORE USE FOR THE FIRST TIME

- All the parts will be cleaned thoroughly before using for the first time□Please do it as the directions□
- Take the power cable from the bottom of product, then connect to the AC socket.

COMMISSIONING

1. The mixing food must conform to the mixing food specified, and then turn the rise knob to open the upper lid.
2. Put the bowl into base, then turn and wind it.
3. The beater connector locks the whisk with dustproof lid.
4. Slightly turn the rise knob down, the upper lid will sink ,then use the left hand to press it and make it stable, then open the knob up and lock.
5. After finish debuging, then stop and turn the speed button for“OFF”, it will be closed.
6. Turn the rise knob by the clockwise, the upper body will automatically bounce up. 7. Take the bowl out of base.

INSTRUCTIONS

1. Firstly, please mix the food which is fit for the mixer specified by the manufacturer, then turn on the knob to open the upper lid by the clockwise.
2. Put the bowl with food into base and push the upper arrowhead to make the bowl lock by the anticlockwise.
3. Then make the whisk by the clockwise to lock on the beater connector.
4. Lastly, turn on the knob by the clockwise and press the upper lid down.

OPERATION INSTRUCTION

Dough making:

1. The proportion flour and water is 5:3 (the proportion is only for your referance, it may adjust accoring to your personal requirements.)
2. Use low speed for 1 minute then use middle speed mixing for 3-4 minutes.
3. Ensure not beyond the Max capacity of the bowl.
4. The bowl Max capacity is 1000g flour□water 550g, mixing longest time for 3 minutes, suggest to working at middle speed.
5. Use the mixing equipment: : dough hook

Egg breaking or butter whisking:
Pouring the egg into bowl as quatity specified, recommend to use speed MAX to mix for 2-5minutes, until the eggs become pasty.

1. The Max quatity of egg-breaking is 18pcs.
2. While mixing the butter, mixing 1.5-2.0L fresh butter at middle speed to mix 3-5minutes.
3. When mixing the fresh milk, butter or other liquid, please ensure its quatity within the Max capacity of bowl.
4. Use the mixing equipment: egg whisk.

Mixing cold dish, salad, and liquid food, cocktail or other liquid:

1. The mixing food will be backed into the bowl as personal preference. Usually it will mix about 5 minutes between the low & max speed.
2. Please don't be beyond the capacity of bowl; with more food, the mixing speed will use the low speed, or the food will overflow.
3. Use the mixing equipment: flat beater

CAUTION: KB time: 5 minutes.

CLEANING

1. Before cleaning, please ensure the speed is at "OFF"; and pull up the power plug.
2. After using, waiting for the machine cooldown, then begin to clean.
3. When cleaning the outer device, you may use dry or wet cleaning cloth and a little cleaner to clean, but can't allow the water or cleaner into inner device, in case damage the parts or cause the danger of electric shock.
4. Please don't use abrasive material or alcohol to clean the inner device and dust-proof lid
5. Please don't dip the machine into water to clean.
6. Please carefully clean the mixing equipments, you may use warm water and cleaner to clean it.
7. Please carefully clean the bowl, it may also use the usual cleaner to wash, but please don't use abrasive material or special cleaning liquid.
8. You may use dish-washing machine to clean bowl, beater, dough hook, egg whisk and dust-proof lid.

PACKING LIST

- host 1 pc
- bowl 1 pc
- flat beater 1 pc
- dough hook 1 pc
- egg whisk 1 pc
- egg white separator 1 pc
- manual 1 pc

Voltage Frequency:
450 WATTS VOLTAGE: AC120V/60Hz
600 WATTS VOLTAGE: AC220V/50Hz
Capacity□3.5 L

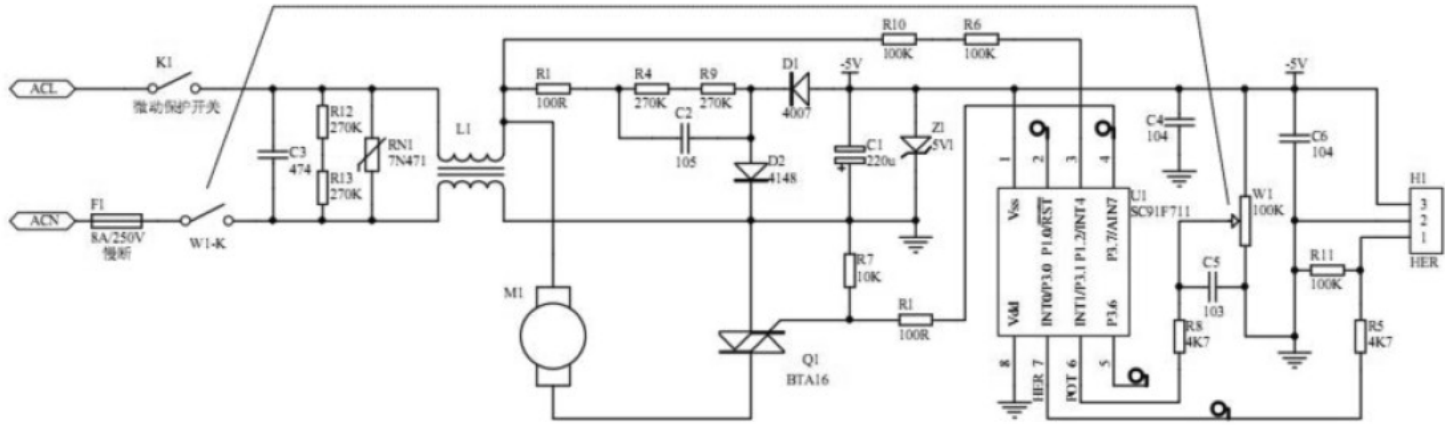
K1
ACL
微动保护开关
ACN
F1
8A/250V
慢断
W1-K
C3
474
R12
270K
R13
270K
RN1
7N471
L1
R1
100R
R4
270K
R9
270K
C2
105
D1
4007
D2
4148
-5V
C1
220u
Z1
5V1
R10
100K
R6
100K
R7
10K
R1
100R
M1
Q1
BTA16
U1
SC91F711
Vss
P1.6/RST
P1.2/INT4
P3.7/AIN7
Vdd
INT0/P3.0
INT1/P3.1
P3.6
HER 7
POT 6
C4
104
C6
104
W1
100K
C5
103
R8
4K7
R11
100K
R5
4K7
H1
3
2
1
HER

AC220V/50Hz

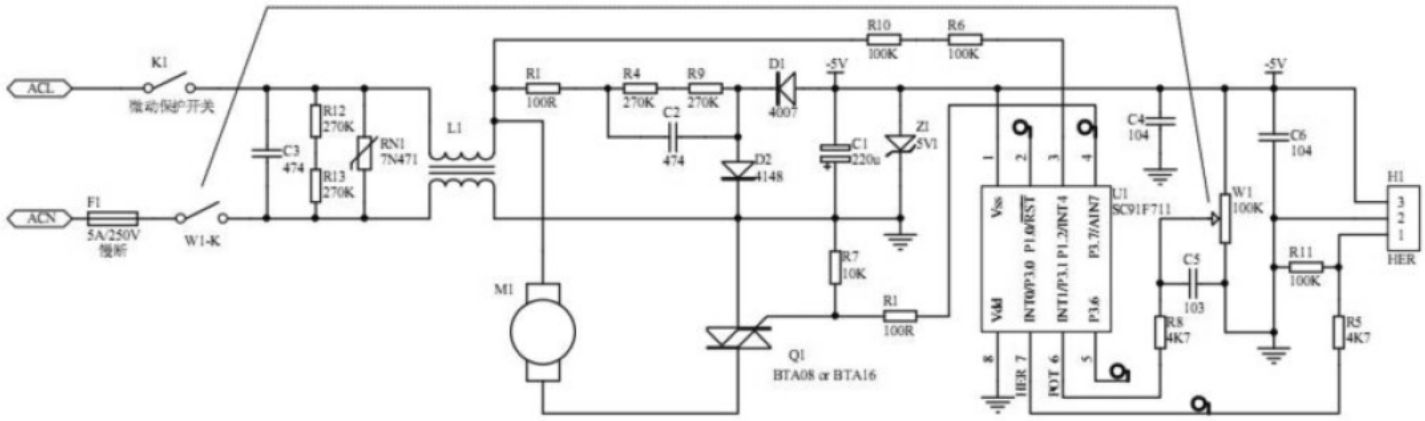
K1
ACL
微动保护开关
ACN
F1
5A/250V
慢断
W1-K
C3
474
R12
270K
R13
270K
RN1
7N471
L1
R1
100R
R4
270K
R9
270K
C2
474
D1
4007
D2
4148
-5V
C1
220u
Z1
5V1
R10
100K
R6
100K
R7
10K
R1
100R
M1
Q1
BTA08 or BTA16
U1
SC91F711
Vss
P1.6/RST
P1.2/INT4
P3.7/AIN7
Vdd
INT0/P3.0
INT1/P3.1
P3.6
HER 7
POT 6
C4
104
C6
104
W1
100K
C5
103
R8
4K7
R11
100K
R5
4K7
H1
3
2
1
HER